



XLGNXKA3 Network Keyboard

User Manual

Legal Information

©2024 Inaxsys Security. All rights reserved.

About this Manual

Thank you for purchasing our products. If you have any questions or needs, please feel free to contact us. In this section the purpose of this manual is to ensure that users can use the product correctly to avoid danger or property loss in operation. Before using this product, please read the product manual carefully and keep it properly for future reference.

The contents described in this manual may be different from the version you are using. If you have any questions about using this manual, please contact our technical support for help. The contents of this manual will be updated on a regular basis, and the company reserves the right not to be notified.

Contents

Chapter 1 Product Overview	1
1.1 Brief Description	1
1.2 Product Characteristics	1
Chapter 2 Product Interface Description	2
2.1 Interface Description	2
2.2 Connections	2
2.2.1 Networking	2
2.2.2 RS485	3
Chapter 3 Description of Keyboard Front Key	4
3.1 Description of Keyboard Front Key	4
3.2 Rotary Rocker	5
Chapter 4 Add Devices	6
4.1 Add Network Equipment	6
4.2 Add Analog Equipment	6
Chapter 5 Network Configuration	7
5.1 Home Link and Login	7
5.2 WEB End Network Settings	8
5.3 System Upgrade	9
5.4 System Reset	9
5.5 Restart	9
5.6 Import Configuration	10
5.7 Export Configuration	10
5.8 Version Information	11
Chapter6 FQA	12

Chapter 1 Product Overview

1.1 Brief Description

The new design of KA3 keyboard with PC +ABS which has strong maneuverability and effectively solves the inconvenient problem of web page operation camera. High-end atmosphere, simple and beautiful appearance; industrial LCD module display , fine and clear characters. KA3 keyboard support ONVIF, PELCO protocol, strong scalability, built-in web client to make the configuration interface simple and clear, easy to operate, only a few steps to achieve the perfect control of the camera.

1.2 Product Characteristics

1. Support network, analog two control mode, network mode with independent IP address.
2. Support for ONVIF, PELCO-P and PELCO-D protocol.
3. Realize the software function control to the camera, have the central control function.
4. Adopt imported variable speed four-dimensional rocker to control, feel comfortable and good, joystick can directly control the all-round rotation of the camera, zoom of the lens, according to the strength of joystick control can change speed control, fast and slow rhythm with control.
5. Support web browser to add configuration front-end device parameters.

Chapter 2 Product Interface Description

2.1 Interface Description



Figure 2-1 Interface

No.	Items	Description
1	DC12V	Standard 5.5/2.1 Power interface, DC 12V2A±10.
2	RJ45	Network interface, support RJ45.
3	Rs485	support RS-422 interface, support RS-485.

Table 2-1 Interface Description

2.2 Connections

2.2.1 Networking

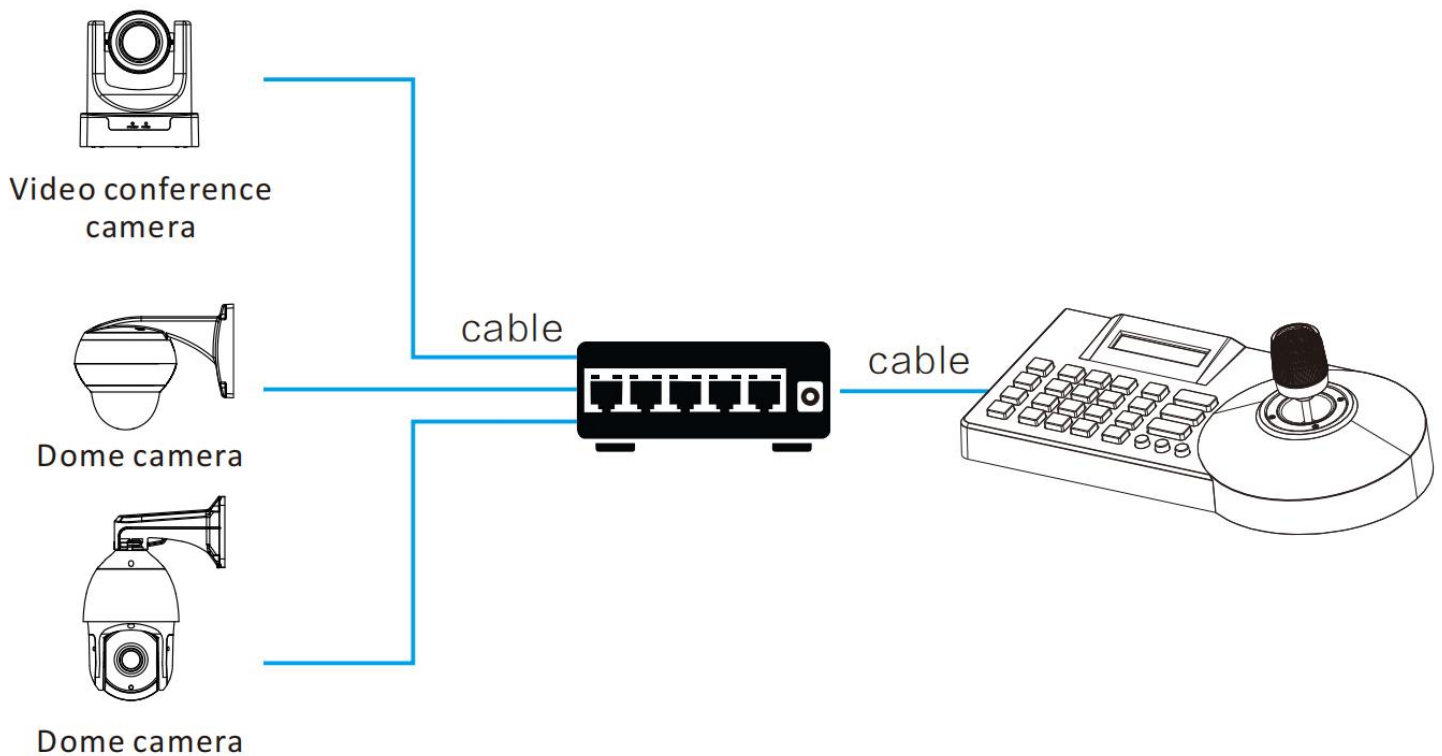


Figure 2-2-1 Network Connection

The keyboard is connected to the ptz camera in the same LAN and ensures that the IP address is in the same network segment, such as: 192.168.1.123 and 192.168.1.111 belong to the same network segment ; 192.168.1.123 and 192.168.0.125 does not belong to the same segment, at this time need to modify the

keyboard or ptz camera IP address. Keyboard default IP acquisition for DHCP.

2.2.2 RS485

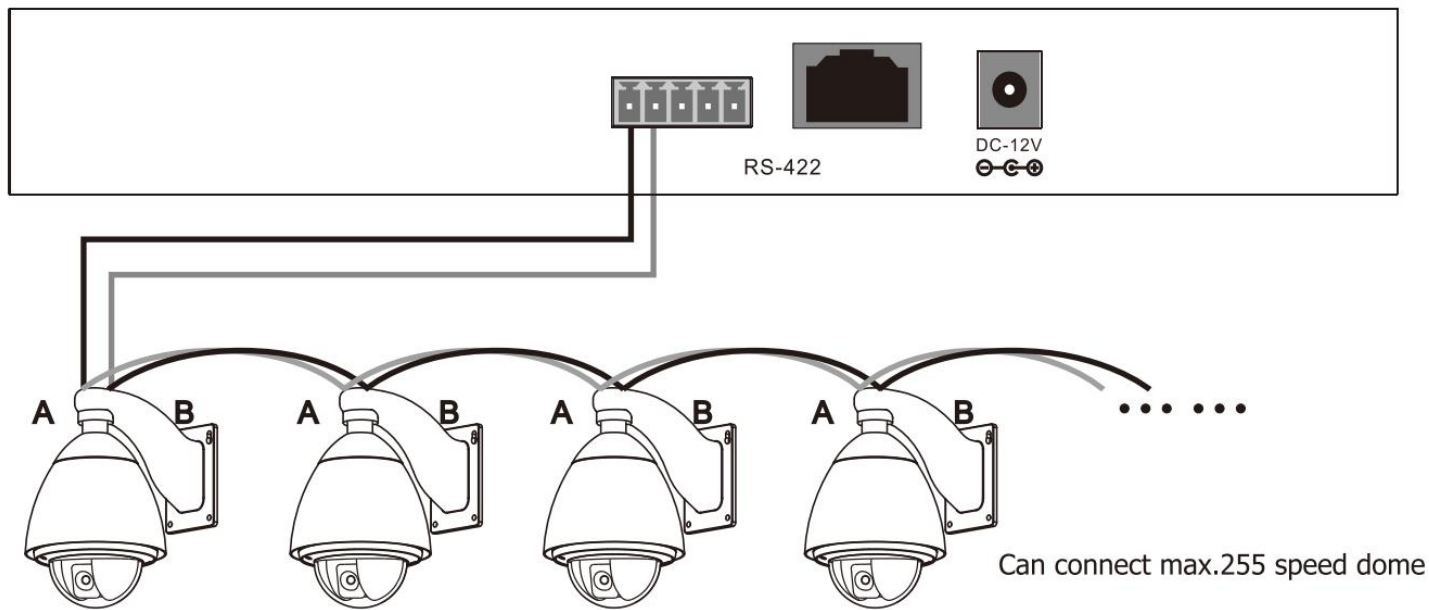


Figure 2-2-2 Analog Mode RS485 PTZ Camera Connection

Control output:

- **RS485+** of PTZ camera connect to keyboard **Ta**;
- **RS485-** of PTZ camera connect to keyboard **Tb**.

Chapter 3 Description of Keyboard Front Key

3.1 Description of Keyboard Front Key

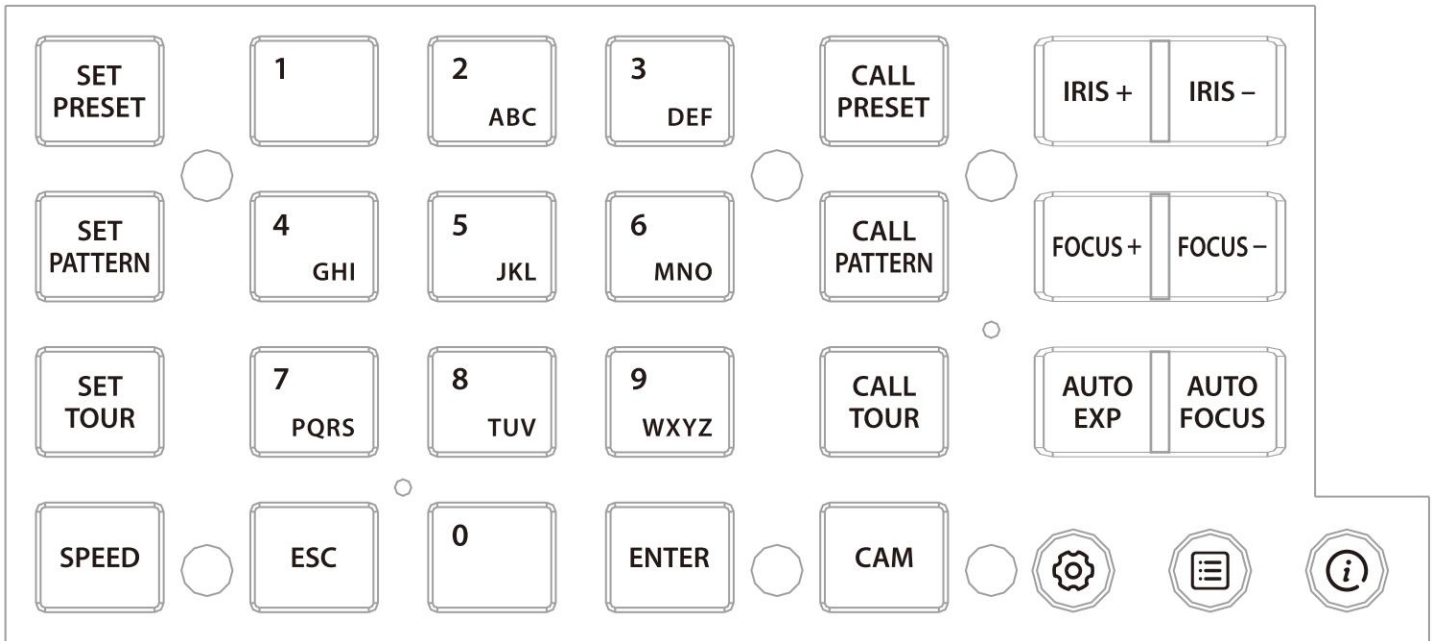


Figure 3-1 Keyboard Front Key

Items	Description
SET PRESET	Set the preset key: press [SET PRESET], and then press the number, [confirm] the preset setting is successful.
CALL PRESET	Call the preset key: press [CALL PRESET], and then number, [confirm] call the preset successfully.
SET PATTERN	Set the pattern scan, press [SET PATTERN], set the pattern scan number, [confirm] to enter the study, and then press [SET PATTERN] exit learning this key to use with the rocker or function for replication operations.
CALL PATTERN	Call pattern scan, press CALL PATTERN], and then number , [confirm] call pattern scan successfully.
SET TOUR	Set the cruise trajectory, press [SET TOUR], to enter the cruise and then set the cruise number by number, then press [confirm], add the preset, and confirm that the cruise time setting [confirm] is complete after adding.
CALL TOUR	Press [CALL TOUR],,) before calling cruise [confirm] successfully. The aperture, IRIS adjust the aperture to become larger, IRIS - adjust the aperture to become smaller.
IRIS+/-	The aperture, IRIS adjust the aperture to become larger, IRIS - adjust the aperture to become smaller.
FOCUS+/-	Focus, FOCUS the far focus to make the near object clearer, the long press will change the focal length of the picture has been far focus, FOCUS- the near focus screen makes the distant object clearer, the long press will change the focal length of the picture has




	been near focus.
AUTO EXP	Automatic exposure, click the button to enter auto-adjust screen exposure mode.
AUTO FOCUS	Auto-focus, click set ball machine auto-focus on the object.
0-9	0-9 numeric keys for function numbering.
SPEED	Speed, used to adjust the speed of the head to the head, a total of one, two, three are low, medium, high.
ESC	Exit button.
ENTER	Confirm keys. (remote sensing keys)
	Keyboard setting keys.
	Query, list of added devices.
	Keyboard device information, view keyboard firmware version, hardware version, web version, ip, gateway, subnet
CAM	The camera number to quickly switch to the device that binds the encoding to the camera (CMA NUMBER ENTER switch).

Table 3-1 Button Description

 **Note**

The control keyboard can not be invoked if this feature is not built into the following protocols or fastball itself.

3.2 Rotary Rocker







Operating	Output control	Operating	Output control	Operating	Output control
	UP		Down		Left
Operating	Output control	Operating	Output control	Operating	Output control
	Right		Zoom+ (3D only)		Zoom- (3D only)

Figure 3-2 Joystick

Joystick:

- Up and down left and right: control camera up and down left and right joystick.
- Left and right rotation: zoom+-IV. Add devices.

Chapter 4 Add Devices

4.1 Add Network Equipment

Steps:



1. Click on the keyboard  to enter the main menu.
2. Select [>Device:Add] add webcam, fill in IP, port,username password, camera add finish.






Figure 4-1 Add Network E quipment

3. Select  to enter the query interface to select the added IP address confirmation to connect (or click "CAM"); and the number set by the camera number is connected by confirmation.

4.2 Add Analog Equipment

Steps:

1. Click  to enter the keyboard settings main menu to select item 2 [confirm] to switch analog mode.
2. Click  select Item 1 [Device: Add] add Simulator, then fill in change one or all camera settings, select ball machine protocol [Pelco-D/P], [baud rate], [address].
3. Select  to enter the query interface to select the added IP address confirmation for connection (also click "CAM"); and the number set by the camera number is connected by confirmation. (See photo).
4. Setting the main menu interface description:

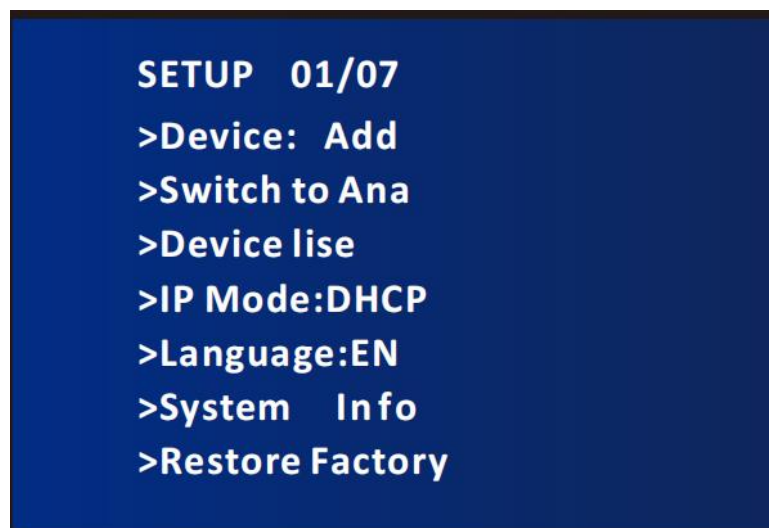


Figure 4-2 Keyboard Sets Main Menu Interface

Chapter 5 Network Configuration

5.1 Home Link and Login

Connect the power cord of the keyboard and connect the network cable. When the keyboard is started, the local machine will be displayed on the display screen IP 192.168.x.xxx, enter this IP address into the browser to access the page configuration, **initial user name: admin; password: empty.**

Steps:

1. The keyboard and the computer are connected to the same LAN the IP address of the keyboard is entered on the browser. (Default username: admin; password: empty).



Figure 5-1-1 Login

2. After entering the device web client, the page appears as follows.

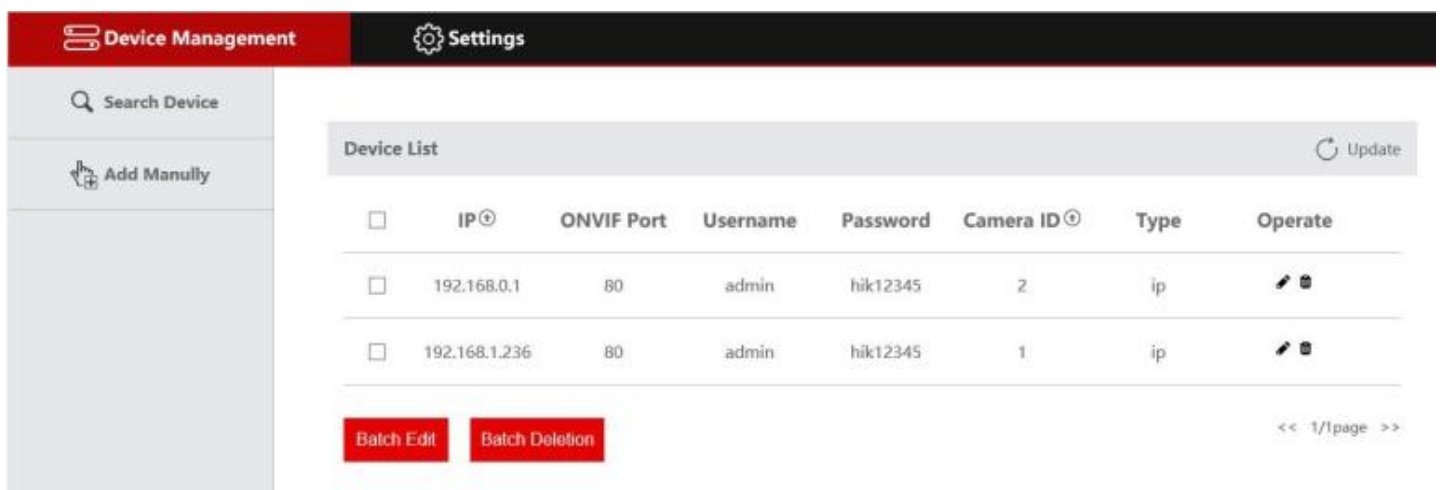


Figure 5-1-2 After Entering

3. Access to the home page of the device the device parameters details, can be changed.

4. Click the to add and modify the device parameters in the LAN. The page shows the following:

Enter the device number, corresponding IP address, port number and user name and click Save.

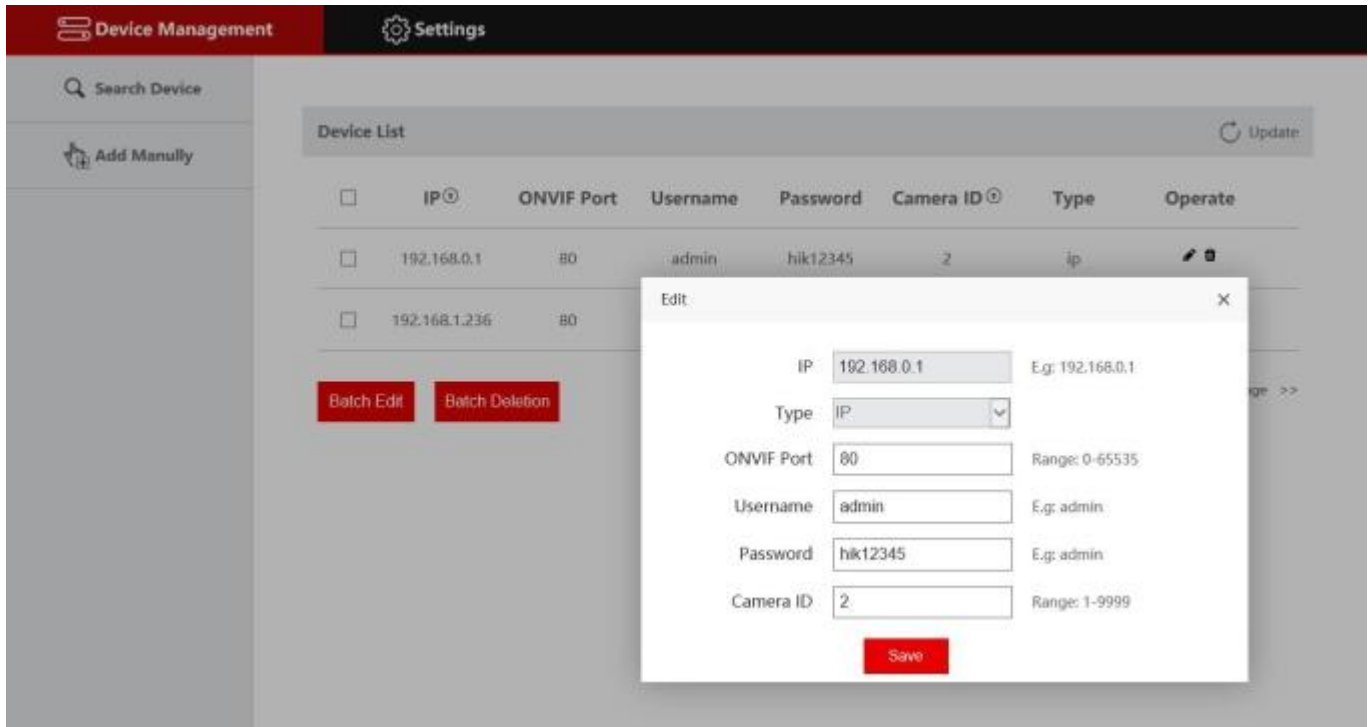


Figure 5-1-3 Edit

Note

When you enter the keyboard WEB terminal to add a device successfully, it will be synchronized with the keyboard. After the device is successfully added on the web page, click the number corresponding to the keyboard to control the dome.

5.2 WEB End Network Settings

LAN settings can modify the device IP acquisition mode and port parameters, as shown below.

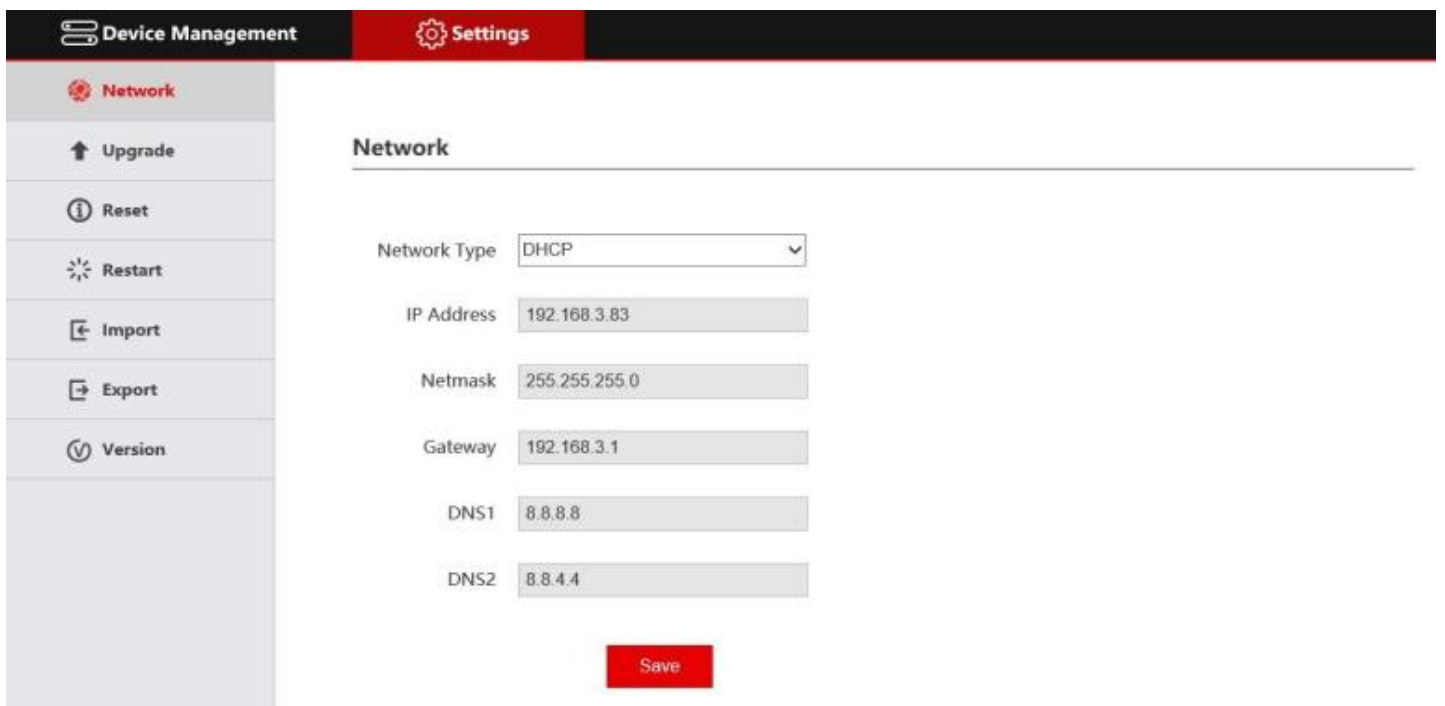


Figure 5-2 Network

Static address (STATIC): changes the network type to static when the user needs to set the network segment by himself Address, and fill in the network segment information that needs to be modified.

Dynamic address (DHCP)(default access): the keyboard automatically requests the router IP address successfully, Then it can be displayed on the display screen of the keyboard in the format of "native IP:" XXX.XXX.XXX." XXX".

5.3 System Upgrade

Upgrade function is used as maintenance and update keyboard function, select the correct upgrade file after entering the upgrade page, Click start and the device will restart automatically after the upgrade is complete.

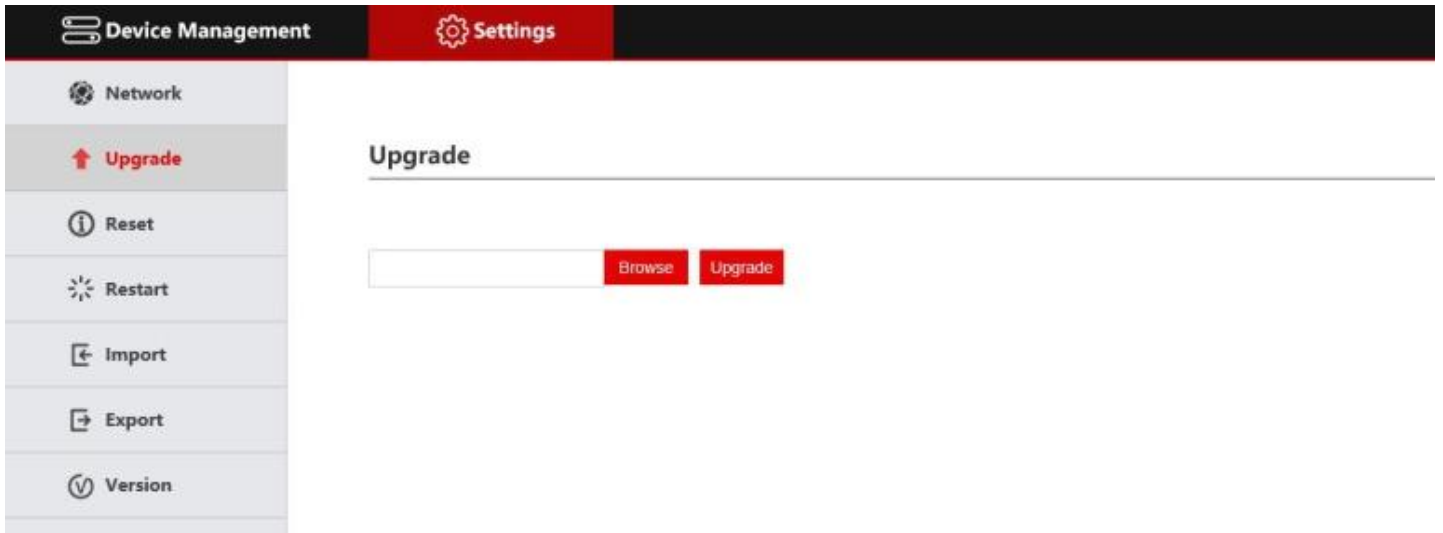


Figure 5-3 Upgrade

Note

During the upgrade process, do not cut off the power, cut off the network!

5.4 System Reset

When the device is reset, the keyboard removes configuration information and clears the added device.

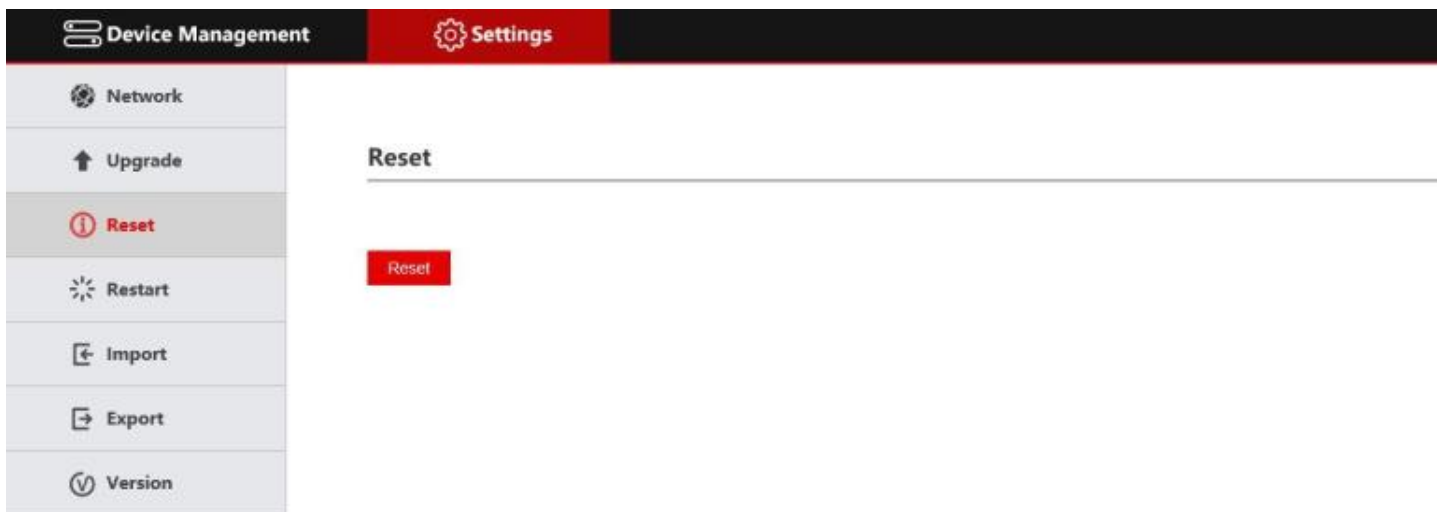


Figure 5-4 Reset

5.5 Restart

When the device runs for a long time, need to restart maintenance, click restart to achieve the purpose of restart maintenance.

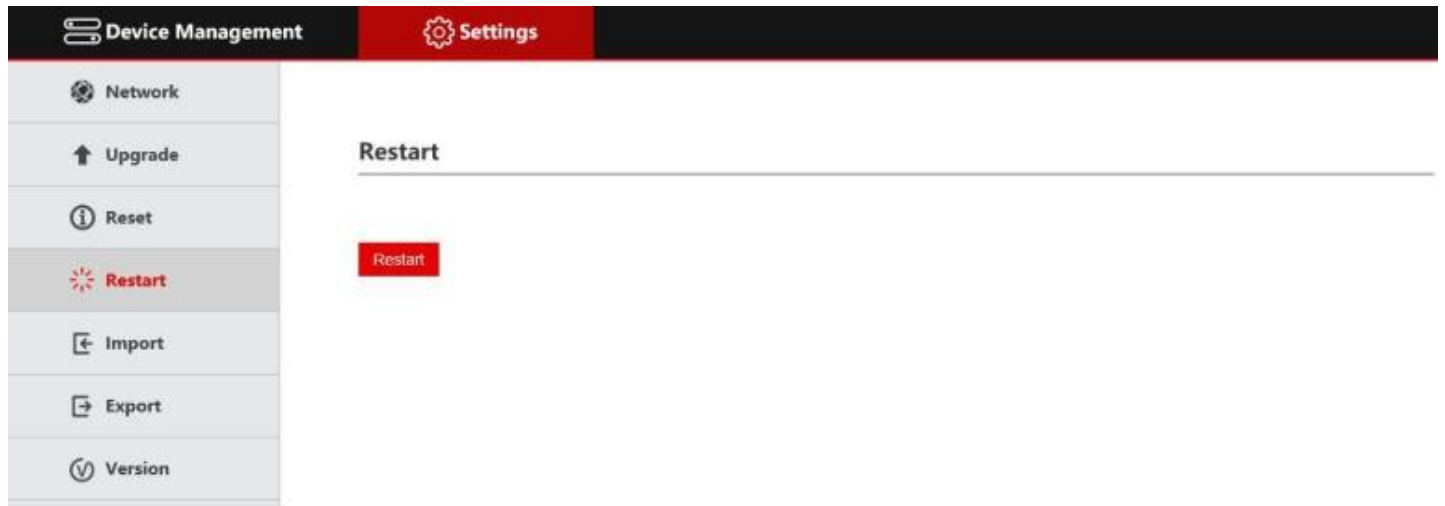


Figure 5-5 Restart

5.6 Import Configuration

Import the device information of the previous keyboard, (for example, export the file type when the keyboard a multiplex device, use as an import to another device when adding a new keyboard.

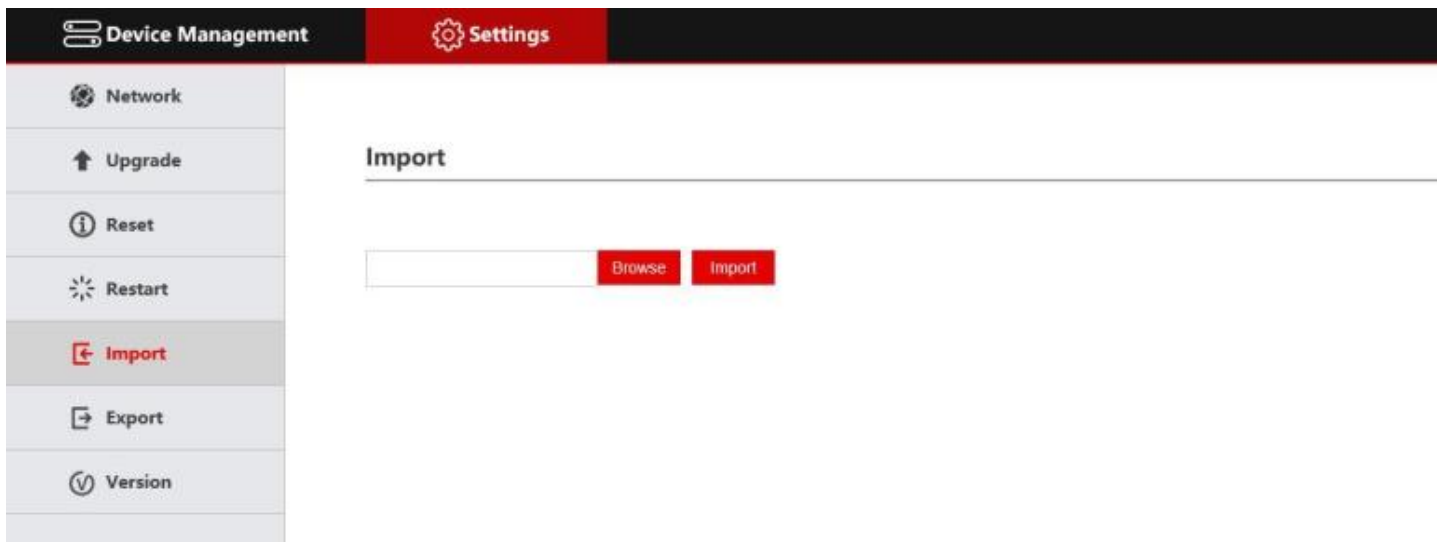


Figure 5-6 Import

5.7 Export Configuration

Export the current keyboard to add multi-channel device information, can be exported to other keyboard devices for use.



Figure 5-7 Export

5.8 Version Information

Displays software and hardware information for the current keyboard.

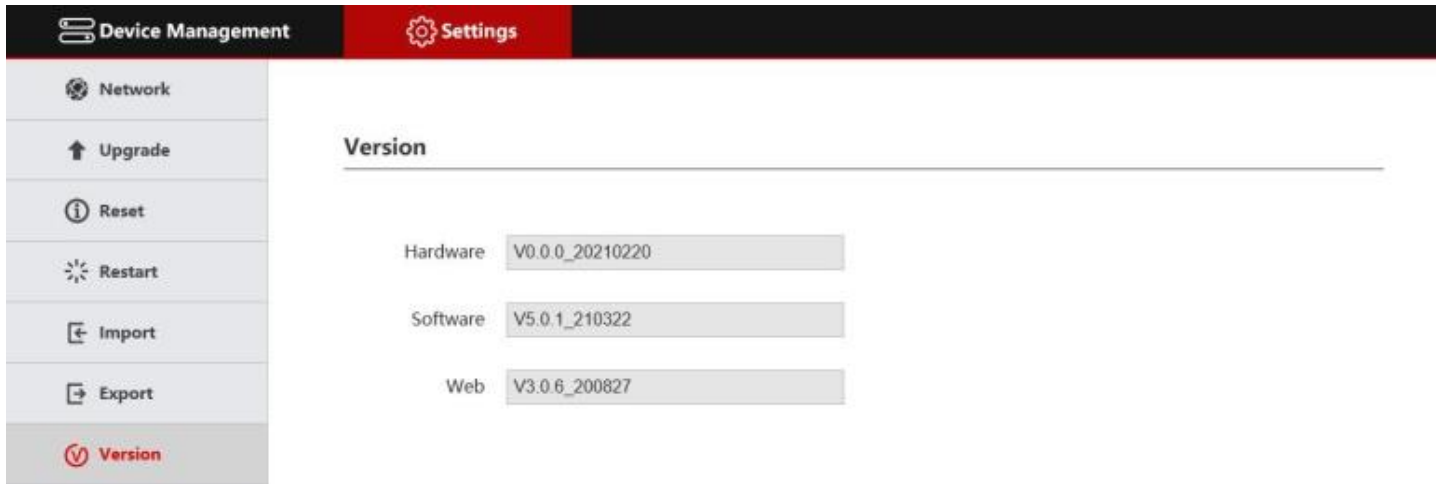


Figure 5-8 Version

Chapter6 FQA

1. When the screen shows connection failure, check that the device corresponding to this IP is normal in the LAN connection.
 2. When the screen shows "username password error", check if the added device username password is right.
 3. Add other brands of device prompts with ONVIF protocol fails, check if the camera turns on the device ONVIF agreement.
-

Note

1. Manual add device.
 2. Enter the correct port number and device connection protocol.
-